Enzo Bogus Caller Technical Guide





Introduction

A bogus calller button enables a person to raise an alarm is they get unwanted visitors. For anyone concerned about the potential risks of unwanted callers, an Enzo bogus caller button installed on or beside the door can provide extra peace of mind. This wireless emergency panic button allows the user to easily and discreetly place an alarm call to Careium if they feel uneasy about, or threatened by, someone at the door. The bogus caller button has two-way data communication which means the user receives a confirmation that the alarm has been acknowledged. When the button is pressed, the LED indicator lights up. When the base alarm receives the signal from the button, this is confirmed by the indicator light changing color.

The bogus caller button is compatible with all of Careium's current base units: CareIP® Mobile, CareMobile, Eliza & Eliza S.

Description of Functions


- · LED indicates transmission and battery status. Range covers a normal house or flat.
- · Confirmation of successful alarm transmission.
- Lithium battery for long life, up to 5 years.
- Automatic monitoring of battery and function.
- · Careium is alerted in the event of a fault.
- Battery replaceable by authorised personnel.
- · Can be wall mounted
- · Easy to install with provided 3M pad

Technical data

ENZO BOGUS CALLER PENDANT	
Frequency	869.2 MHz
Water resistance	According to IP67 standard
Battery	1 Lithium, type CR 2032
Automatic alarm test	Yes, selectable
Dimensions	41 x 32 x 15 mm
Article number	300 213


Approval

CE-marked. Complies with relevant standards.

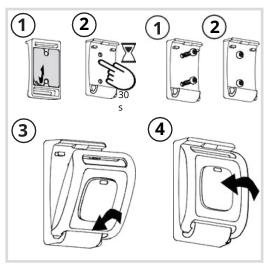

EN: The tape attaches to most surfaces. Ensure your surface is smooth, clean, dry and grease free. Upon removal, the tape can damage sensitive surfaces like wallpaper.

Note: the easy presss is designed to make the pendant easier to press, so only required to add on if you struggle to press the pendant

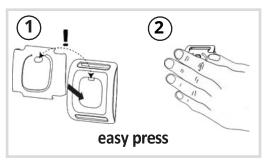



EU declaration of conformity

Hereby, Careium declares that the radio equipment type is in compliance with Directives: 2014/53/EU and 2011/65/EU. The full text of the EU declaration of conformity is available at the following internet address: www.careium.com/dofc

Product information

This product is a part of a social alarm system intended to initiate a call in case of emergency or if assistance is needed. Frequency band: 869.200-869.250 MHz Radio-frequency power: max. 10 mW (10 dBm)

Safety information

- ullet The unit is waterproof for use in shower or bath (IP67).
- Battery replacement may be performed only by authorised persons.

Environmental information

This product complies with the requirements of the EU directive 2006/66/EC (Batteries) and 2012/19/EU (WEEE) and should not be disposed of with other household waste.

Always recycle your used electronic products, batteries, and packaging materials to dedicated collection points.

UK Declaration of Conformity

Hereby, Careium declares that the radio equipment type DFC-0380 (6820) is in compliance with the relevant UK legislation. The full text of the UK declaration of conformity is available at the following internet address: www.careium.com/dofc

Careium Aspinall House, Walker Office Park, Blackburn, Lancashire, BB1 2QE

Call: 0300 333 6511 Visit: www.careium.co.uk Email: uk.info@careium.com



